



VALVE REPLACEMENT IN LEKKO FILTERS

Out of concern for the natural environment, we have introduced replacement filters with removable valves. When buying additional replacement filters, equip them with directional valves removed from the old filter. Below you will find instructions on how to do this in a few simple steps.



VALVE REPLACEMENT

Remove the filter slightly from the scarf according to the instructions in the manual. Using a rigid plastic or metal (non-sharp) edge, gently pry the outer edge of the valve until it disengages (Fig. 1). Place the dismantled valves evenly in the holes in the new filter, making sure that there are no air leaks that could affect the filtration efficiency and they are orientated in correct direction (as seen on the fig. 1 and 2). Take the second part of the valve and snap it into place (Fig. 2). Repeat with the second valve and enjoy effective filtration.



Rys. 1. Disassemble



Rys. 2. Reassemble